


Installation (cont)...

- 2.5. Mount the base in the desired position using the fasteners supplied.
- 2.6. Replace the fan body in-between the spigots and tighten the two retaining clamps or clamp screws.

Fan Maintenance

- 3.1. Inspect the fan at least once every 12 months to ensure that the motor and fan blades are clean. Any build up of dust should be removed using a non-abrasive cleaner.
- 3.2. All fastenings should be checked for tightness.
- 3.3. Bearings are of the 'sealed for life' type and will not need a detailed inspection.

Wiring Diagram

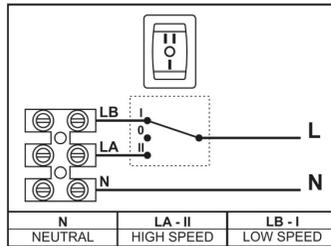

Contact Us



Fantech Contacts

Head Office
Victoria - Melbourne
A.B.N. 11 005 434 024
Ph: +61 (3) 9554 7845
Fax: +61 (3) 9554 7833
Email: info@fantech.com.au

Australia

| | |
|-----------------------|-----------------------|
| Adelaide | (08) 8294 0530 |
| Brisbane | (07) 3299 9888 |
| Darwin | (08) 8947 0447 |
| Melbourne H.O. | (03) 9554 7845 |
| Perth | (08) 9209 4999 |
| Sydney | (02) 8811 0400 |

www.fantech.com.au

New Zealand

| | |
|---------------|---------------|
| Auckland H.O. | (09) 444 6266 |
| Christchurch | (03) 379 8622 |
| Wellington | (04) 566 0532 |

Asia
For agents in the Asian region
call (603) 7846 0340
or visit www.eltfantechasia.com




In-Line Duct Mounted Fan

RIL-150SW
RIL-200SW

INSTALLATION & MAINTENANCE INSTRUCTIONS

Specification

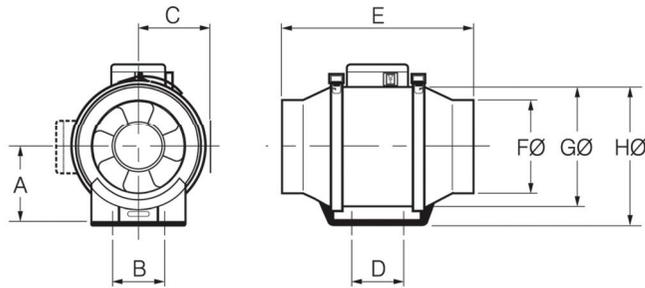

| Model | Dimensions | | | | | | | | | Weight kg |
|-----------|------------|----|-------|-----|-----|-----|-----|-----|-----|-----------|
| | A | B | C | D | E | F | G | H | J | |
| RIL-150SW | 112 | 60 | 100 | 80 | 295 | 147 | 200 | 225 | 236 | 2.7 |
| RIL-200SW | 124 | 94 | 108.5 | 100 | 302 | 198 | 217 | 235 | 265 | 4.9 |

| Model | Speed | Speed r/min | Electrical Data | |
|-----------|-------------|-------------|-----------------|---------|
| | | | FLC Amps | Input W |
| RIL-150SW | HIGH (II) | 2500 | 0.22 | 50 |
| | LOW (I) | 1950 | 0.19 | 44 |
| RIL-200SW | HIGH (II) | 2500 | 0.50 | 120 |
| | LOW (I) | 2000 | 0.45 | 100 |

To select high or low speed, switch the speed selector fitted to the side of the unit's junction box to either "II" for high speed or "I" for low speed.

General

- 1.1. It is important that these Installation and Maintenance Instructions are fully adhered to.
- 1.2. All electrical installations must be carried out by a suitably qualified and competent personnel in accordance with all statutory requirements.
- 1.3. The fan is designed for use in an ambient temperature of up to 40°C. It is not suitable for corrosive or explosive atmospheres.
- 1.4. The installer should provide easy access to the fan to facilitate future maintenance, and ensure that the fan is adequately supported.

- 1.5. This product is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- 1.6. Precautions must be taken to avoid back-flow of gases into the room from the open flue of gas or other fuel burning appliances.
- 1.7. A minimum of one (1) metre of duct is to be fitted to the fan inlet and discharge spigots.
- 1.8. To avoid a hazard, a damaged supply cord must be replaced by the manufacturer.

Installation

Warning: The fan must be isolated from the power supply during installation and maintenance.

- 2.1. Upon receipt, the fan should be inspected for any damage.
- 2.2. Check the details on the rating plate to ensure that the correct power supply is available
- 2.3. Means for electrical disconnection must be incorporated in the wiring installation in accordance with the relevant wiring regulations.
- 2.4. Remove the fan body from the spigots that are attached to the base by releasing the two retaining clamps (RIL-150SW, see diagram), or the two clamp screws (RIL-200SW).

